

Disable MIG

```
$ sudo nvidia-smi -mig 0
Disabled MIG Mode for GPU 00000000:06:00.0
```

Warning: persistence mode is disabled on device 00000000:06:00.0. See the Known Issues section of the nvidia-smi(1) man page for more information. Run with [--help | -h] switch to get more information on how to enable persistence mode.
All done.

```
$ nvidia-smi
Thu Mar 10 21:25:12 2022
```

```
+-----+
--+
| NVIDIA-SMI 510.47.03      Driver Version: 510.47.03      CUDA Version: 11.6
|
|-----+-----+-----+
--+
| GPU   Name               Persistence-M| Bus-Id        Disp.A | Volatile Uncorr.
ECC |
| Fan   Temp   Perf   Pwr:Usage/Cap|      Memory-Usage | GPU-Util  Compute
M. |
|               |              |              |              |              |
M. |
|=====+=====+=====+
==|
|  0  NVIDIA A100 80G...  Off  | 00000000:06:00.0 Off  |
0 |
| N/A   33C    P0     58W / 300W |      0MiB / 81920MiB |      20%
Default |
|               |              |              |              |              |
Disabled |
+-----+-----+-----+
--+

+-----+
--+
| Processes:
|
| GPU   GI    CI          PID    Type    Process name                        GPU
Memory |
|       ID    ID                                 Usage
|
|=====+=====+=====+
==|
| No running processes found
|
```

+ - - - - -
- - +

From:

<https://servizi.di.unimi.it/> - **Servizi Tecnologici**
Dipartimento di Informatica

Permanent link:

<https://servizi.di.unimi.it/hpc:migdisable>

Last update: **2022/03/10 21:26**

